

# CFE PRODUCTS

## **EXTREME DUTY STAINLESS**

### **TAIL LIGHT CB ANTENNA MOUNT**



**MODEL # JW-TLM**

**Jeep CJ & Wrangler**


# **INSTALLATION**

1. REMOVE THE FOUR SCREWS SECURING THE TAIL LIGHT LENS. FIG #1
2. REMOVE TAIL LIGHT BULB. FIG #2
3. REMOVE 3 BOLTS HOLDING TAIL LIGHT ASSEMBLY FROM BODY. FIG #3
4. TEMPORARILY INSTALL MOUNT WITHOUT TAIL LIGHT ASSEMBLY MAKING SURE IT IS STRAIGHT WHEN YOU TIGHTEN THE BOLTS. DRILL A 1/4 INCH WHERE THE CARRIAGE BOLT GOES AS SHOWN. FIG #4 & 5
5. REMOVE THE PLASTIC BUMPER CAP. OPEN THE PLASTIC FENDER COVER . REACH UP BEHIND THE TAIL LIGHT ,AND USING SOME SAND PAPER CLEAN AWAY THE PAINT BEHIND THE 1/4 INCH HOLE YOU JUST DRILLED. INSTALL CARRIAGE BOLT AND NUT. **[ THIS BOLT IS A MUST! IF THE MOUNT IS NOT GROUNDED THE ANTENNA WILL NOT WORK ! ]**
6. YOU NOW HAVE TO DECIDE HOW YOU ARE GOING TO RUN THE WIRE. IF YOU PURCHASED THE DRIVER SIDE MOUNT [ LEFT ] YOU CAN FOLLOW THE TAIL LIGHT WIRE AS SHOWN . FIG #6. THERE IS A LARGE GROMMET JUST BEHIND THE ROLL BAR UNDER THE CARPET. FIG #8 WHEN INSTALLING PASSENGER SIDE MOUNT [ RIGHT ] YOU WILL HAVE TO DRILL A HOLE IN THE SIDE OF THE FENDER WELL. FIG #7. DO NOT CURL ANY EXTRA WIRE UP IN A BALL. MAKE LONG LOOPS AN TUCK IT UNDER THE CARPET.
7. REMOVE THE 3 BOLTS HOLDING THE MOUNT ON AND INSTALL THE TAIL LIGHT ASSEMBLY. RE INSTALL THE BULB AND LENS.
8. IF YOU PURCHASED THE COMPLETE KIT INSTALL THE ANTENNA. THE ANTENNA IS PRE-TUNED AND DOES NOT NEED ANY FURTHER ADJUSTMENT.

**NOTE: NOT RECOMMENDED FOR ANTENNAS OVER 4 FT.**

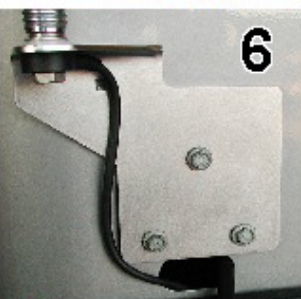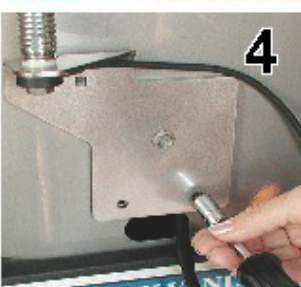

### **OPTIONAL Cable Assembly**



1. Hold "a" cable with end pointing to right in your left hand.
2. Slip "b" over end of cable with long small end first.
3. Fasten threaded end of "c" to threaded end of cable "a".
4. Slide "b" to right and thread over "c" until it becomes loose.
5. You are ready to fasten coax assembly to device.



**INSTALLED MOUNT LEFT & RIGHT**

**Questions or Comments ? call CFE PRODUCTS  
@ 610 358 1886 / ASK FOR BOB**