



**American Trail Products (Part # 37150001)
Renegade Roof Rack System
Installation Instructions**

Always read instructions completely before beginning installation of any American Trail Products.

PARTS LIST AND TOOLS REQUIRED:

PART	DESCRIPTION	QTY PER KIT
Front Panel	Front or Roof Rack	1
Front Panel Support Brace	Bolts to Rear Of Front Panel	1
Rear Panel	Rear of Roof Rack	1
Side Panels	Left & Right Sides of Roof Rack	2
Cross Bars	Cross Bars Marked On End	5
Center Support	Ties Cross Bars Together	1

HARDWARE	DESCRIPTION	QTY PER KIT
Nut, Stover	M6	36
Washer	M6	46
Bolt, Socket Head	M6 x 1.0 x 10	8
Bolt, Button Head	M6 x 1.0 x 16	28
Bolt, Button Head	M6 x 1.0 x 12	5
Bolt, Button Head	M6 x 1.0 x 30	5

TOOLS REQUIRED FOR THIS INSTALLATION (Special Edition Models May Differ)
Allen Wrenches - 5mm, 4mm
Wrench or Socket - 10mm

**American Trail Products, LLC
817 East Lambert Road
La Habra, CA 90631
Phone (877) 360-5337
Email: info@americantrailproducts.com**



Step 1. Remove Products from Packaging.



- (A) Place all parts on a clean protected surface.
- (B) Verify kit contents (see page 1) and inspect for damage.

Step 2. Molding Removal.




Begin by removing the molding from the roof (both sides). You will need to start from the front edge using a small flat blade screwdriver to get under the molding and lift up to remove.

Step 3. Front Panel Brace.

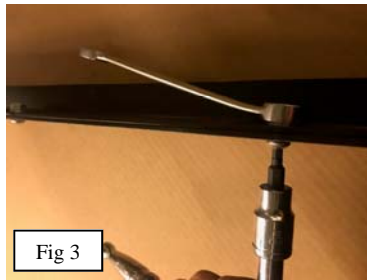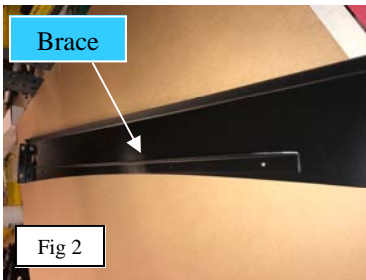

Next, locate the front panel and brace (see fig 2) line up the holes and assemble using supplied M6 x 12MM button head hardware. *(Note: the bolt head should be on the front (See Fig 4).*



Step 4. Roof Side Rail Installation.

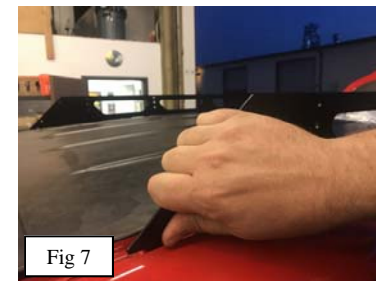

Now, place the side rails into position with logo at rear of vehicle (see fig 5) and install the M6 x 10MM socket head hardware to attach the rails to the roof (see fig 6) *(leave rails loose at this time)* Now repeat on the other side. Next, slide both rails as far back as possible and tighten the hardware. *(some hardware is hard to get to once the front panel is installed)*




Step 5. Front And Rear Panel Installation.

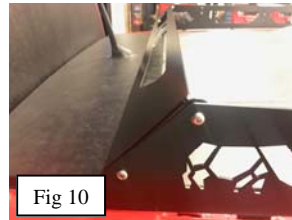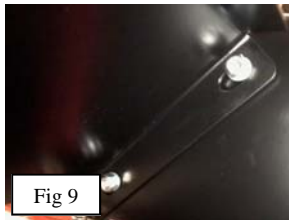

Next, place the front panel between the two side panels (fig 8) line up the top end of the front panel with the top edge of the rack and bolt together using the supplied M6 x 16 button head bolts, washers and nuts (fig 9). Now, place the rear panel between the two side panels (fig 10) and bolt together using the supplied M6 x 16 button head bolts, washers and nuts (fig 11).


Step 6. Cross Bar And Center Support Installation.

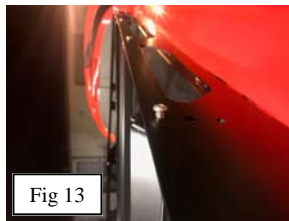

Next, identify the cross bars by locating the number stamped on the end of the plates, now starting at the front of the vehicle place bar marked 1 in the forward position, then 2, 3, 4 with 5 being the last bar at the rear of the vehicle. line up the five cross bars between the two side panels (fig 12) line up the holes on the cross bar with the holes on the side panel and bolt together using the supplied M6 x 16 button head bolts (fig 13) *(leave rails loose at this time)* Now, install the lower hardware (fig 14) using the supplied M6 x 16 button head bolts, washers and nuts *(leave rails loose at this time)*. Now, install the center support (fig 15)

****Note: Cross bars can be flipped over during install to create a shallow basket if desired****

Step 6. Center Support And Final Hardware Installation.

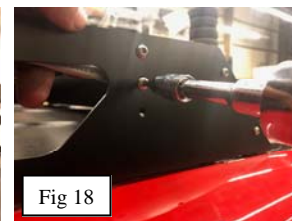

Next, line up the center support with the holes in the cross bars and bolt together using the supplied M6 x 30 button head bolts, washers and nuts (see fig 16/17) Now, you can complete your install by tightening all roof rack hardware (see fig 18).

You're finished! There is one last thing we would like you to do. Take pictures or video of your Jeep and post it on Our social media showing your American Trail Products installed. We may send you something as a thank you for your effort. Thank you for choosing American Trail Products! Any questions or comments call 877-360-JEEP.

